



-  POWER SOCKET
-  EXIT
-  SAFETY EXIT

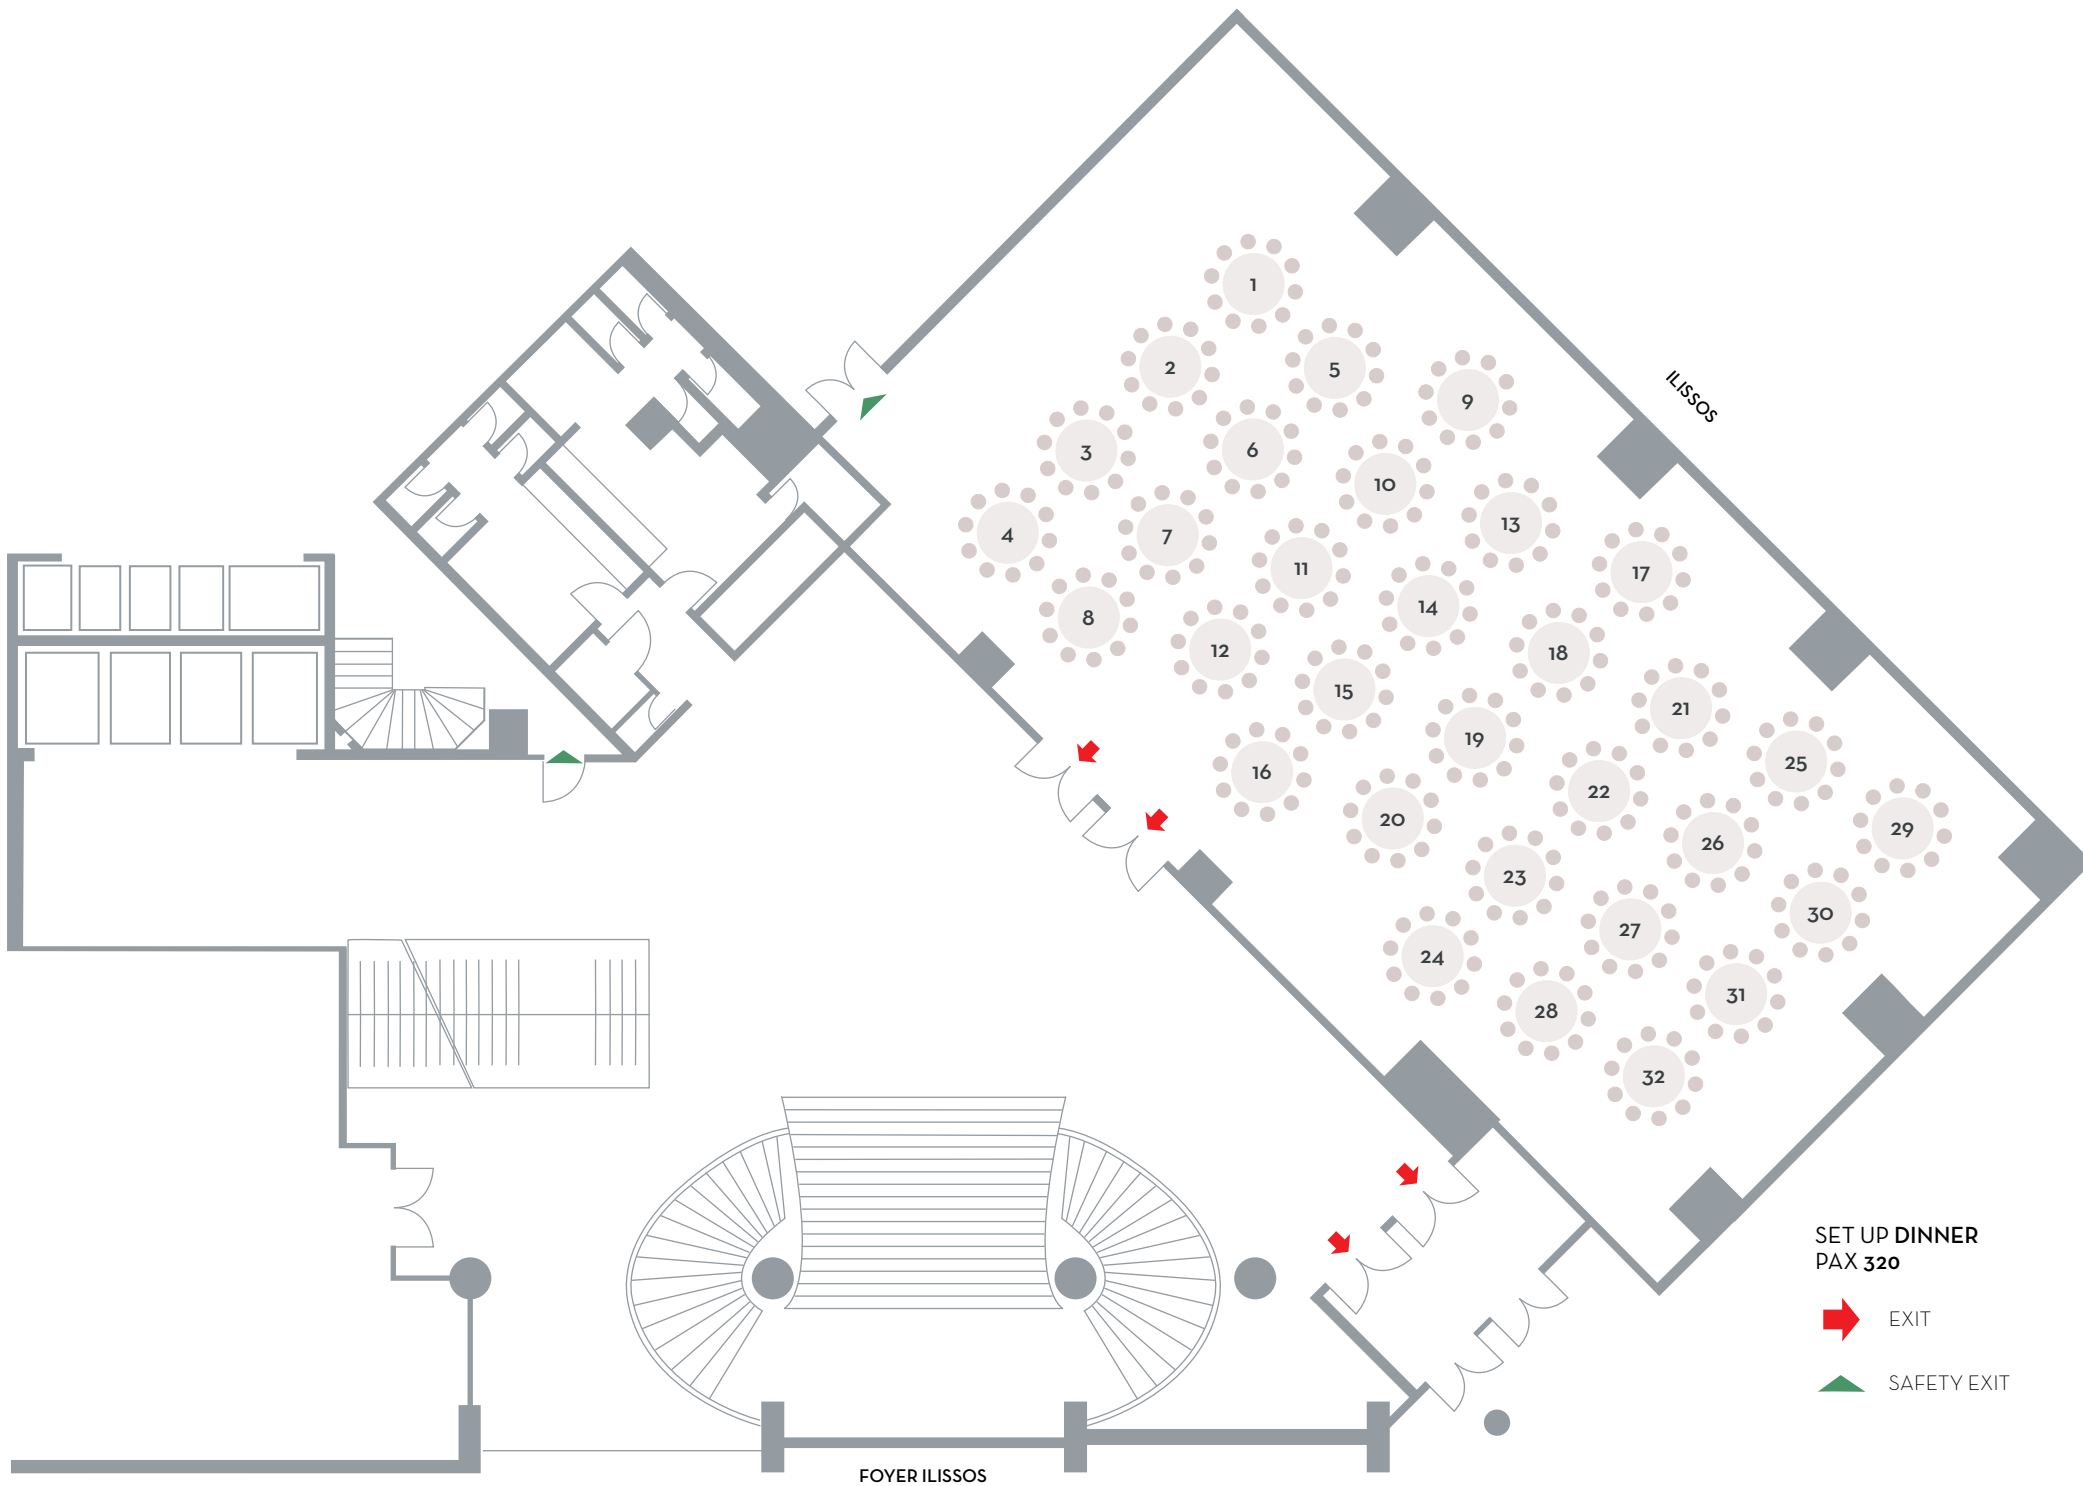

SET UP DINNER  
PAX 320

-  EXIT
-  SAFETY EXIT

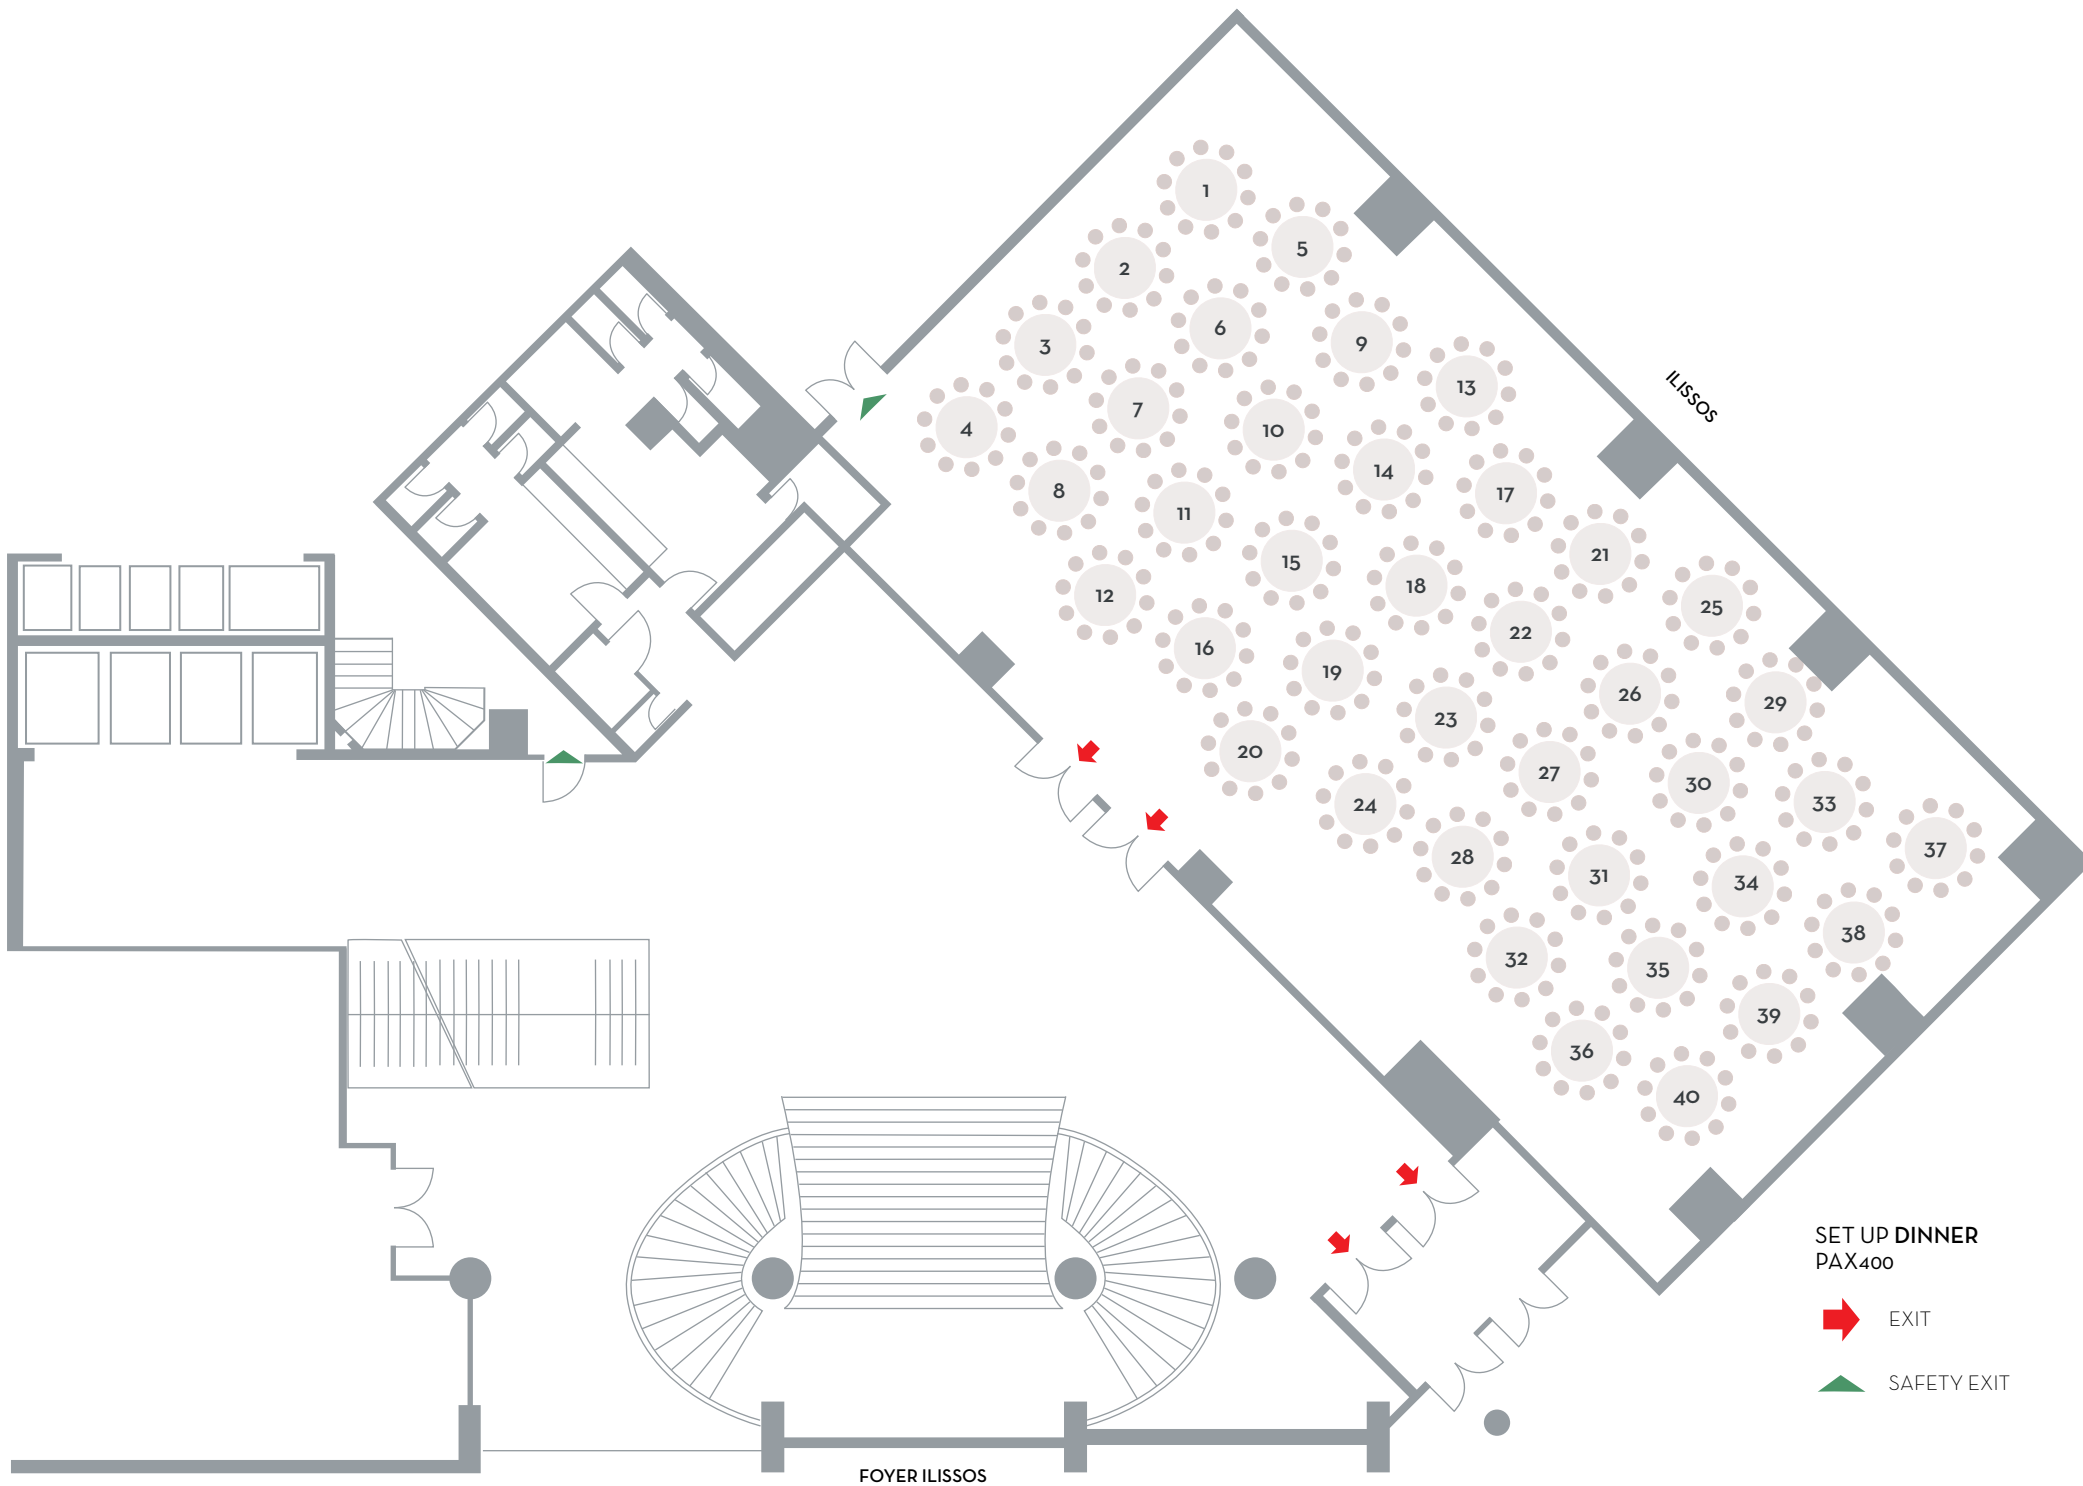


SET UP DINNER  
PAX400

 EXIT

 SAFETY EXIT


FOYER ILISSOS

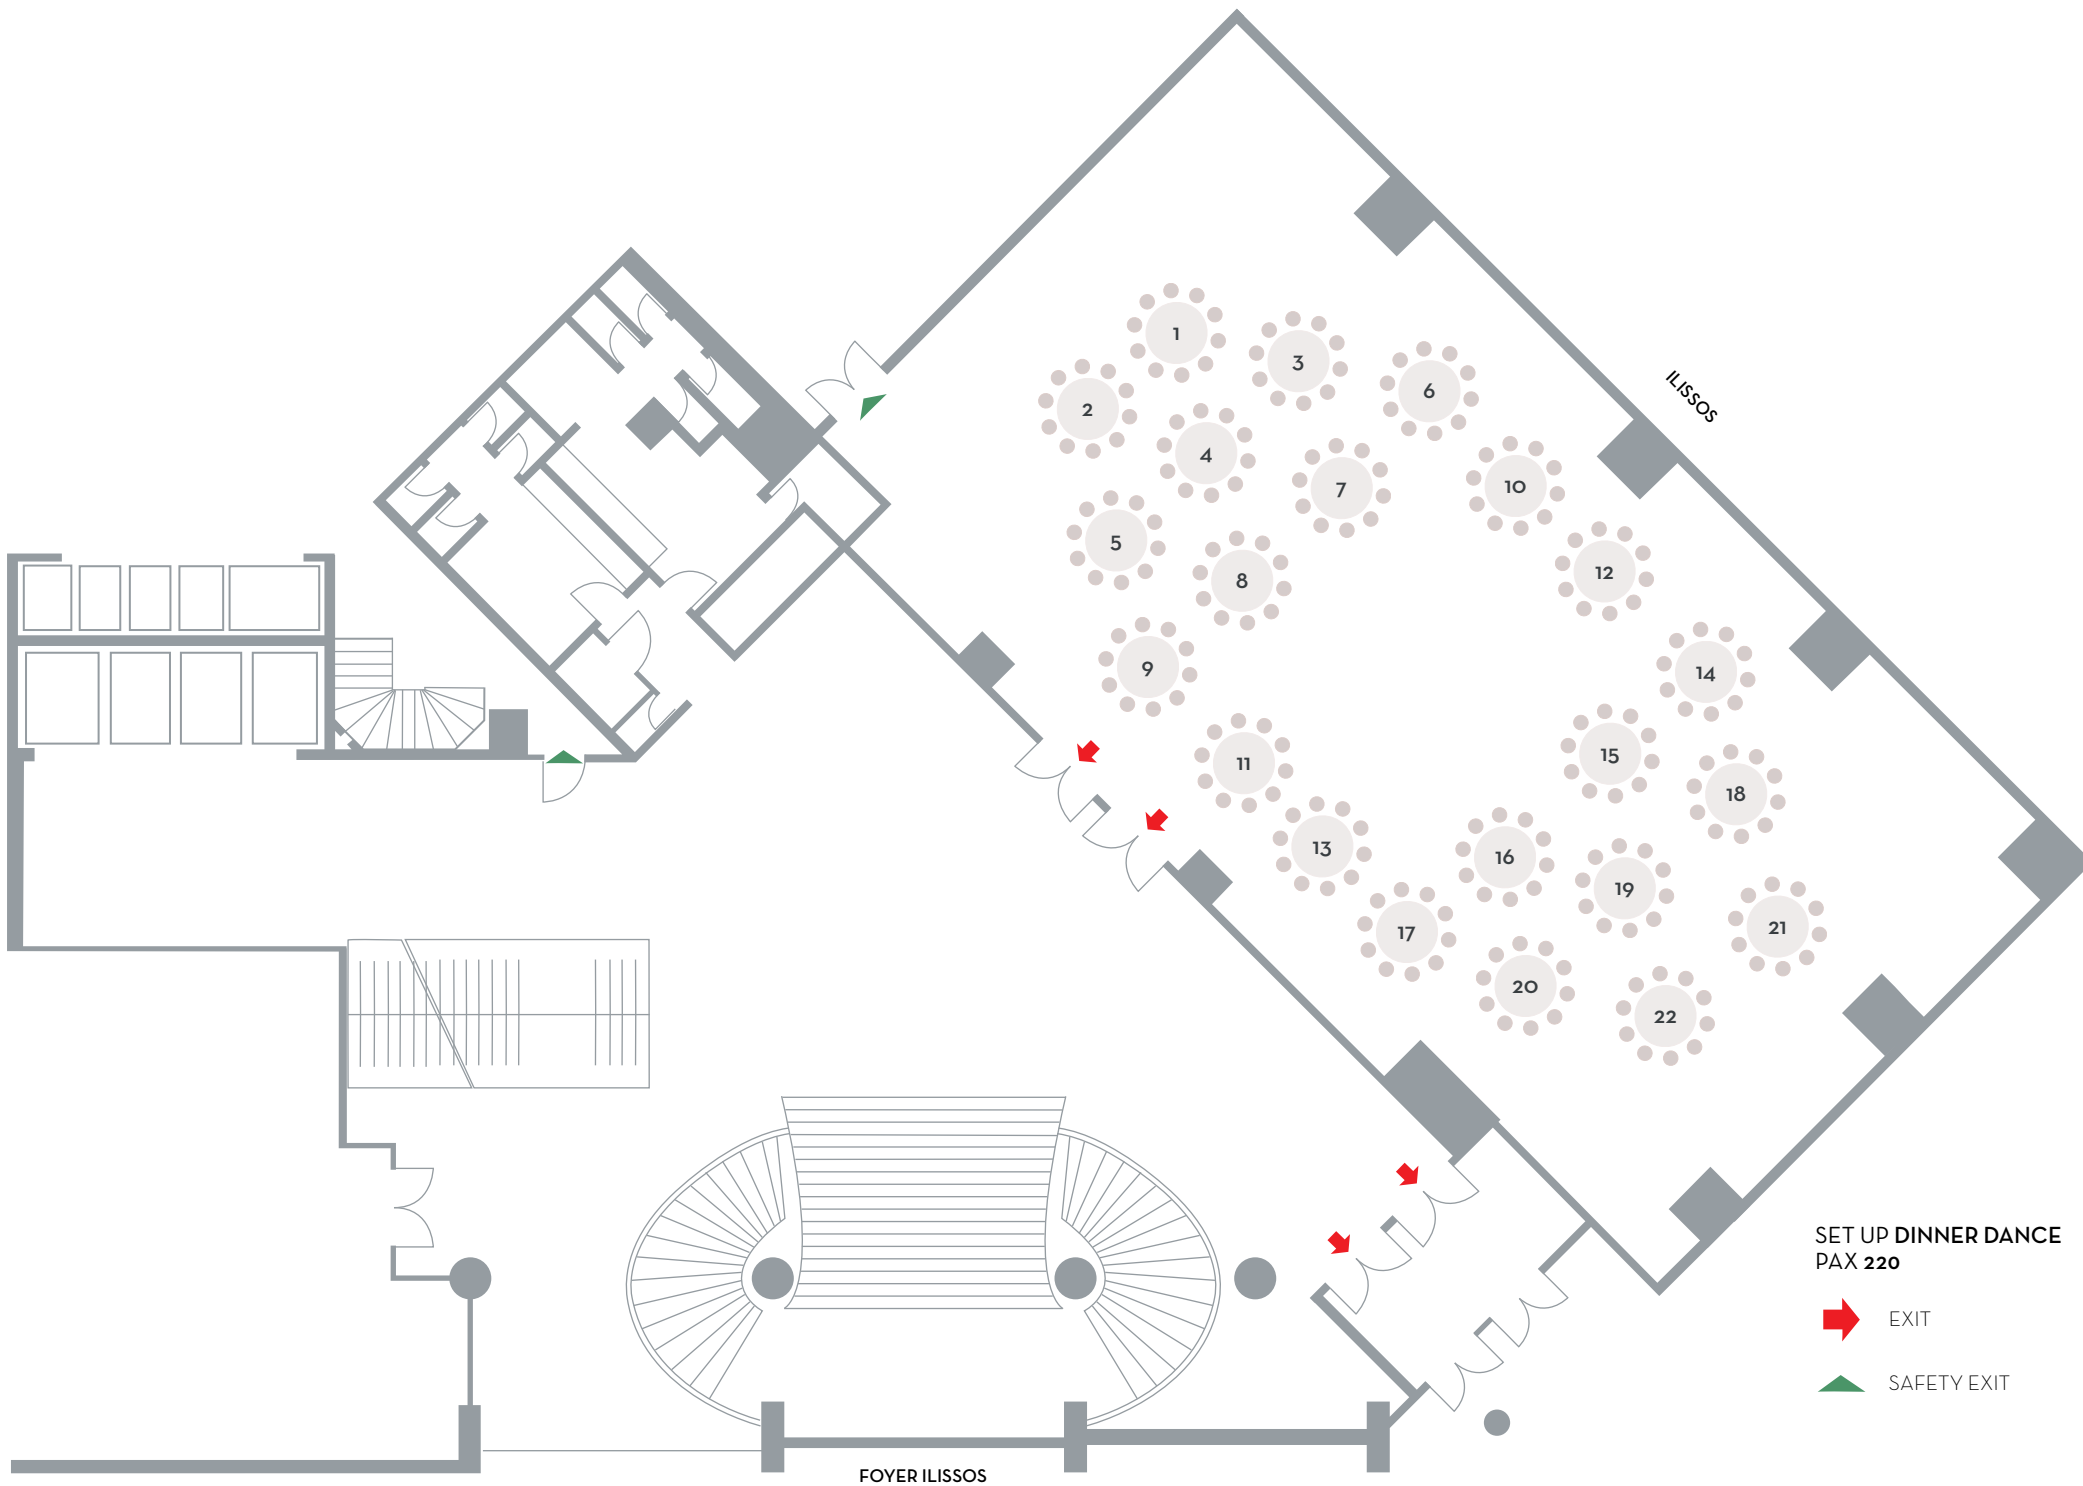

SET UP DINNER DANCE  
PAX 220

 EXIT

 SAFETY EXIT

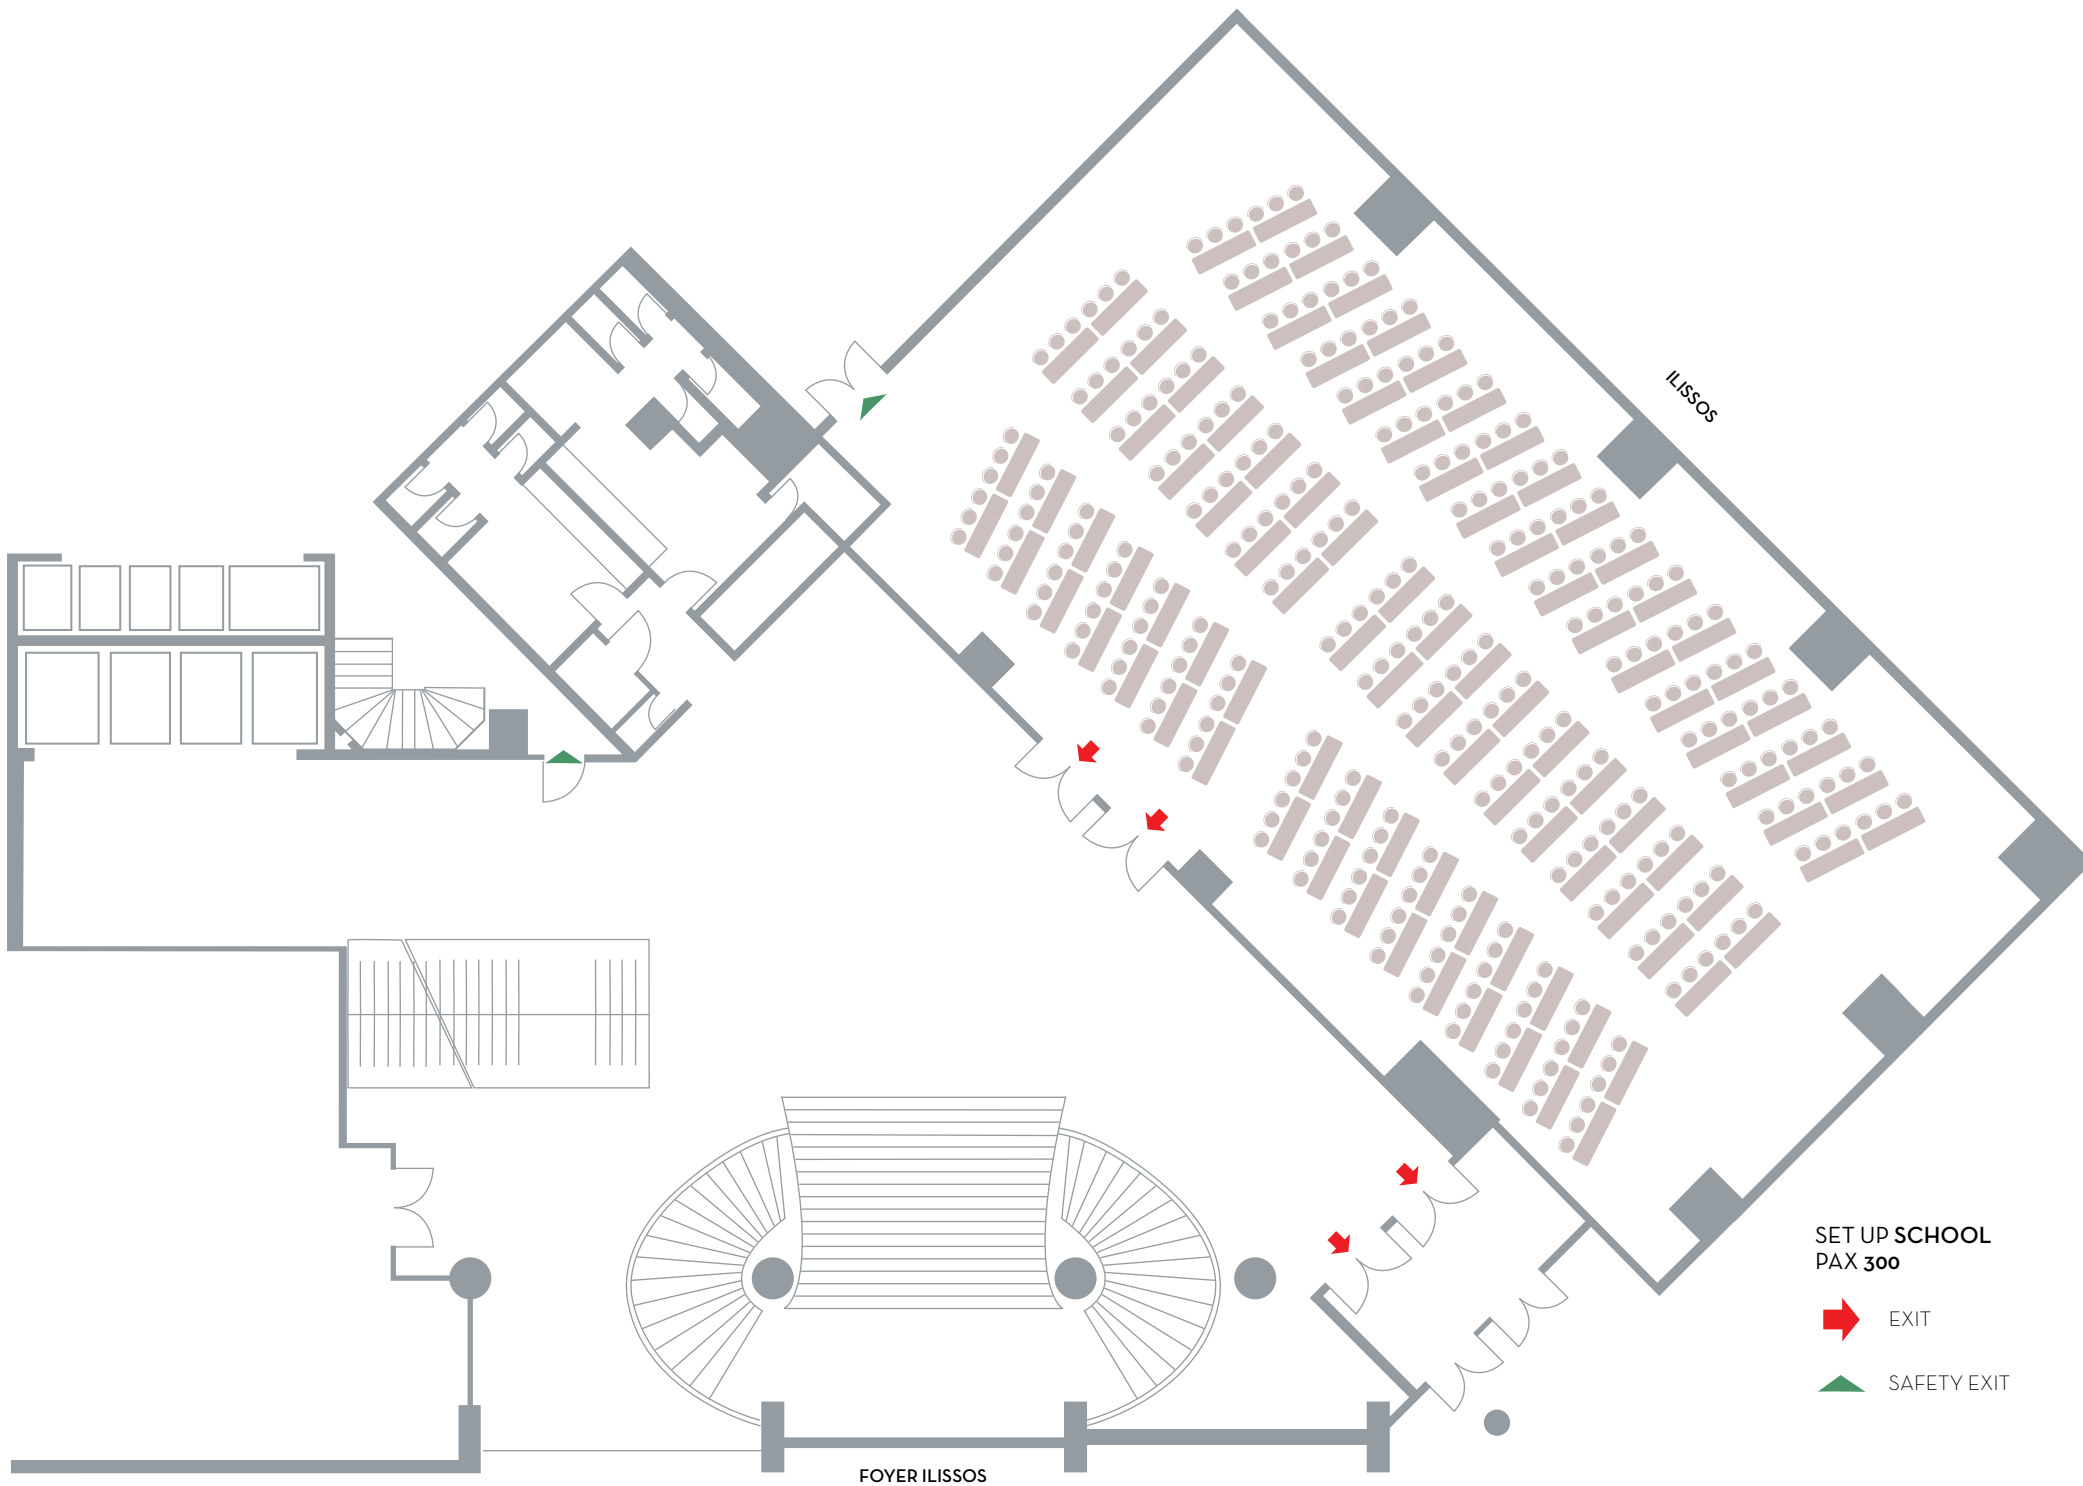

SET UP SCHOOL  
PAX 300




EXIT



SAFETY EXIT

FOYER ILISSOS

ILISSOS

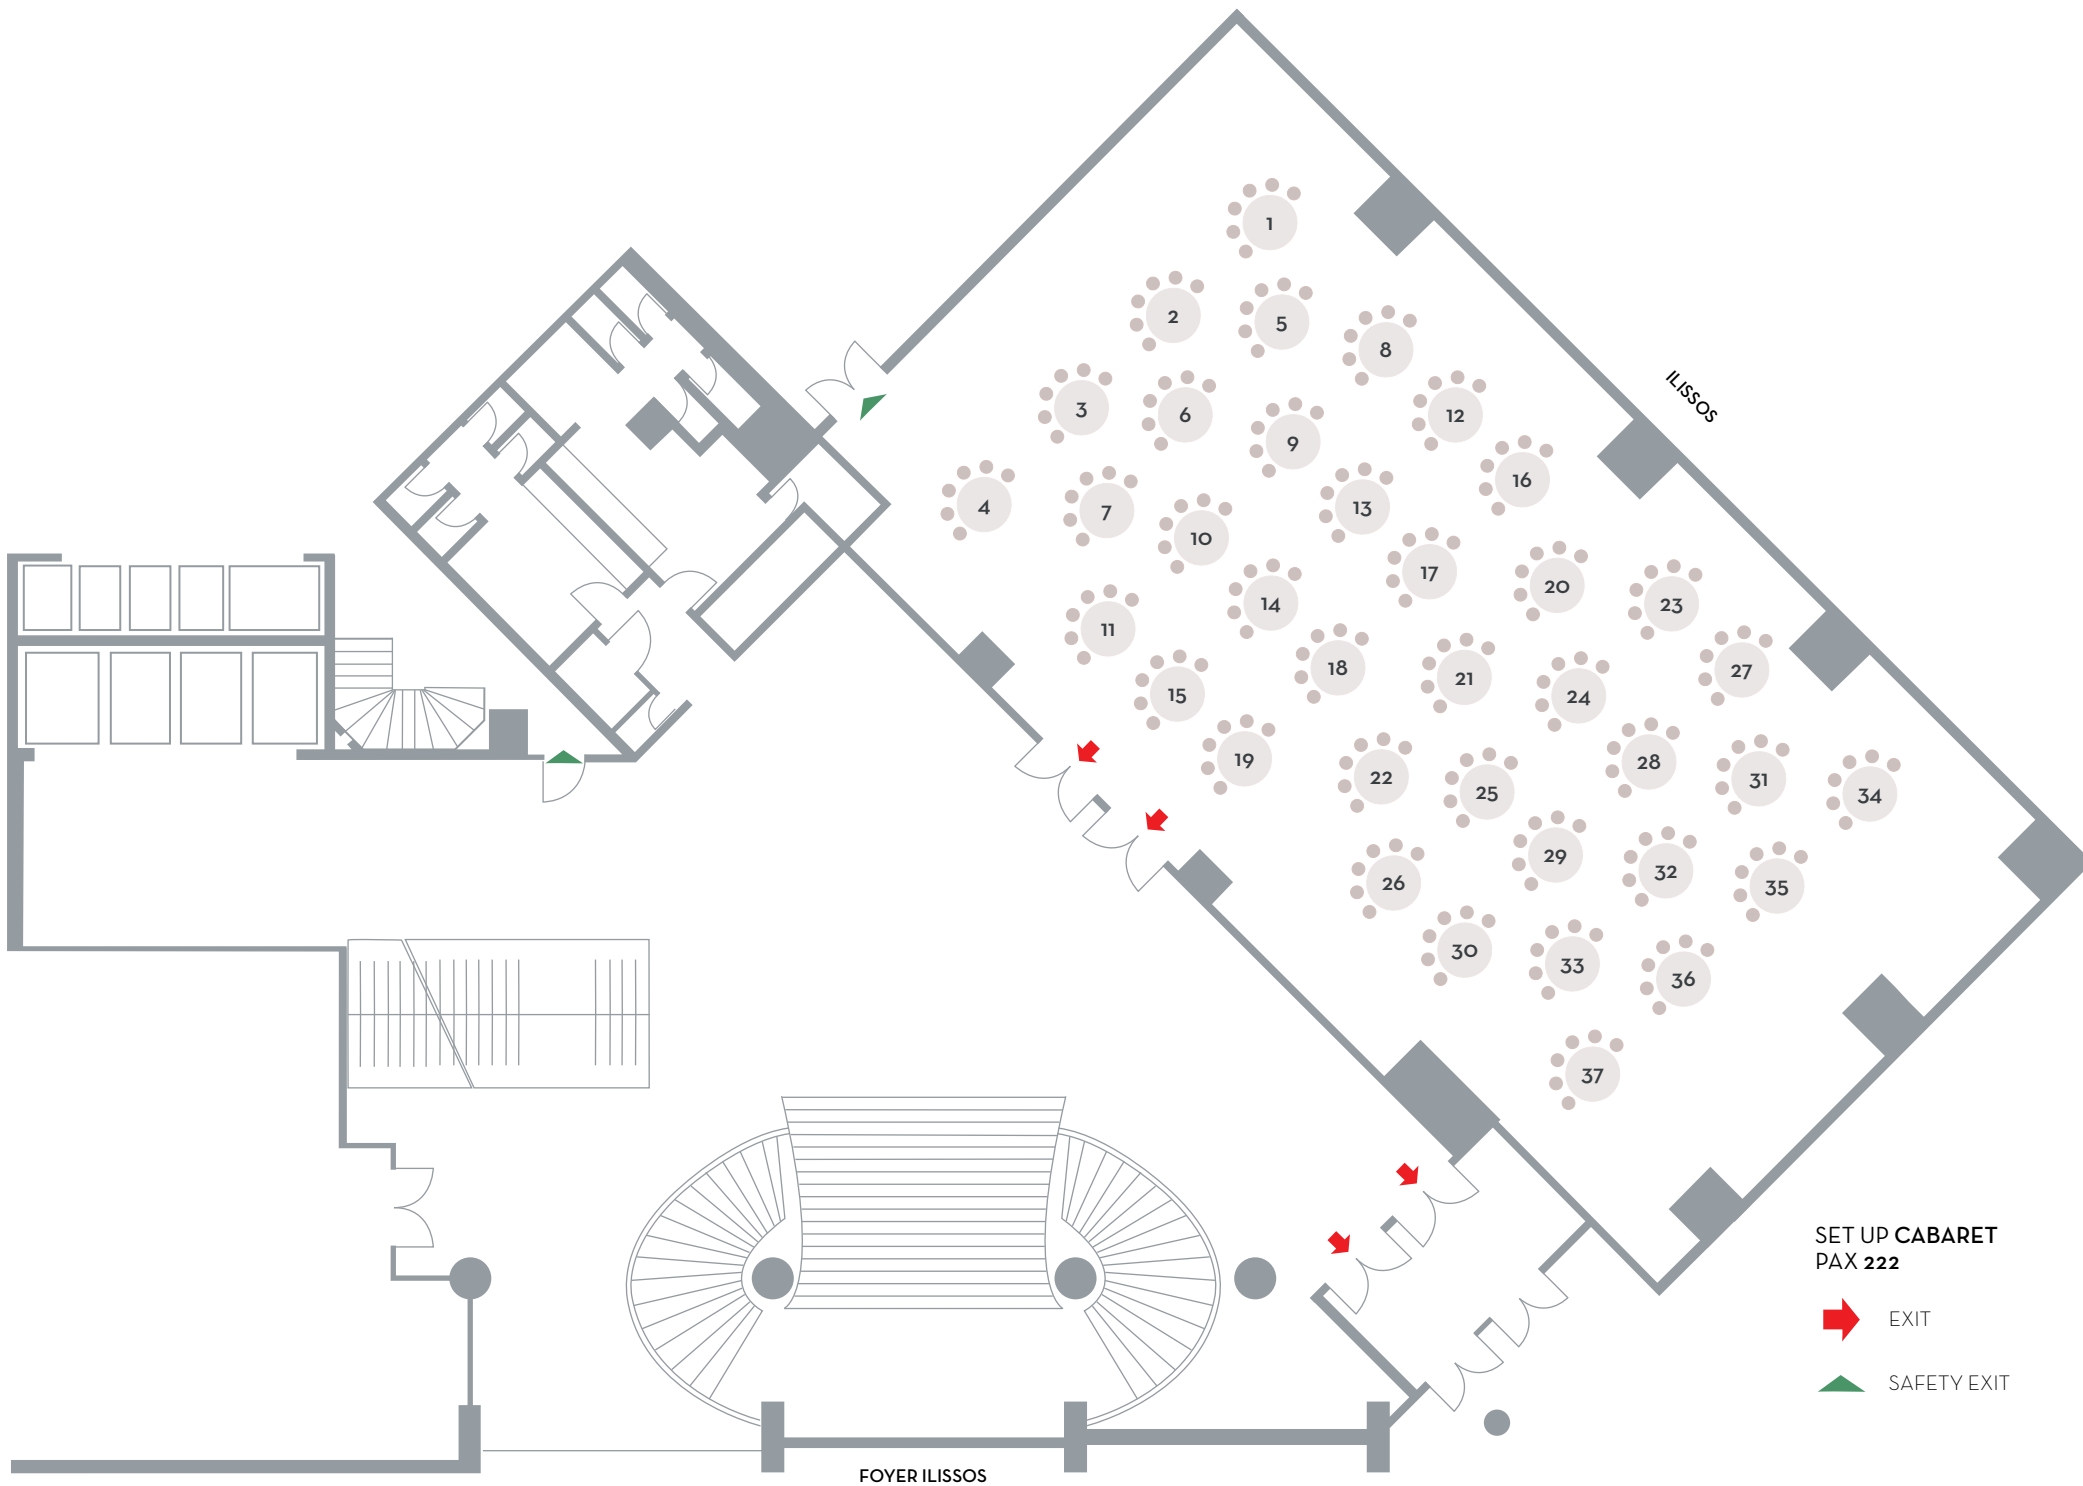


SET UP CABARET  
PAX 222

 EXIT

 SAFETY EXIT

FOYER ILISSOS

ILISSOS

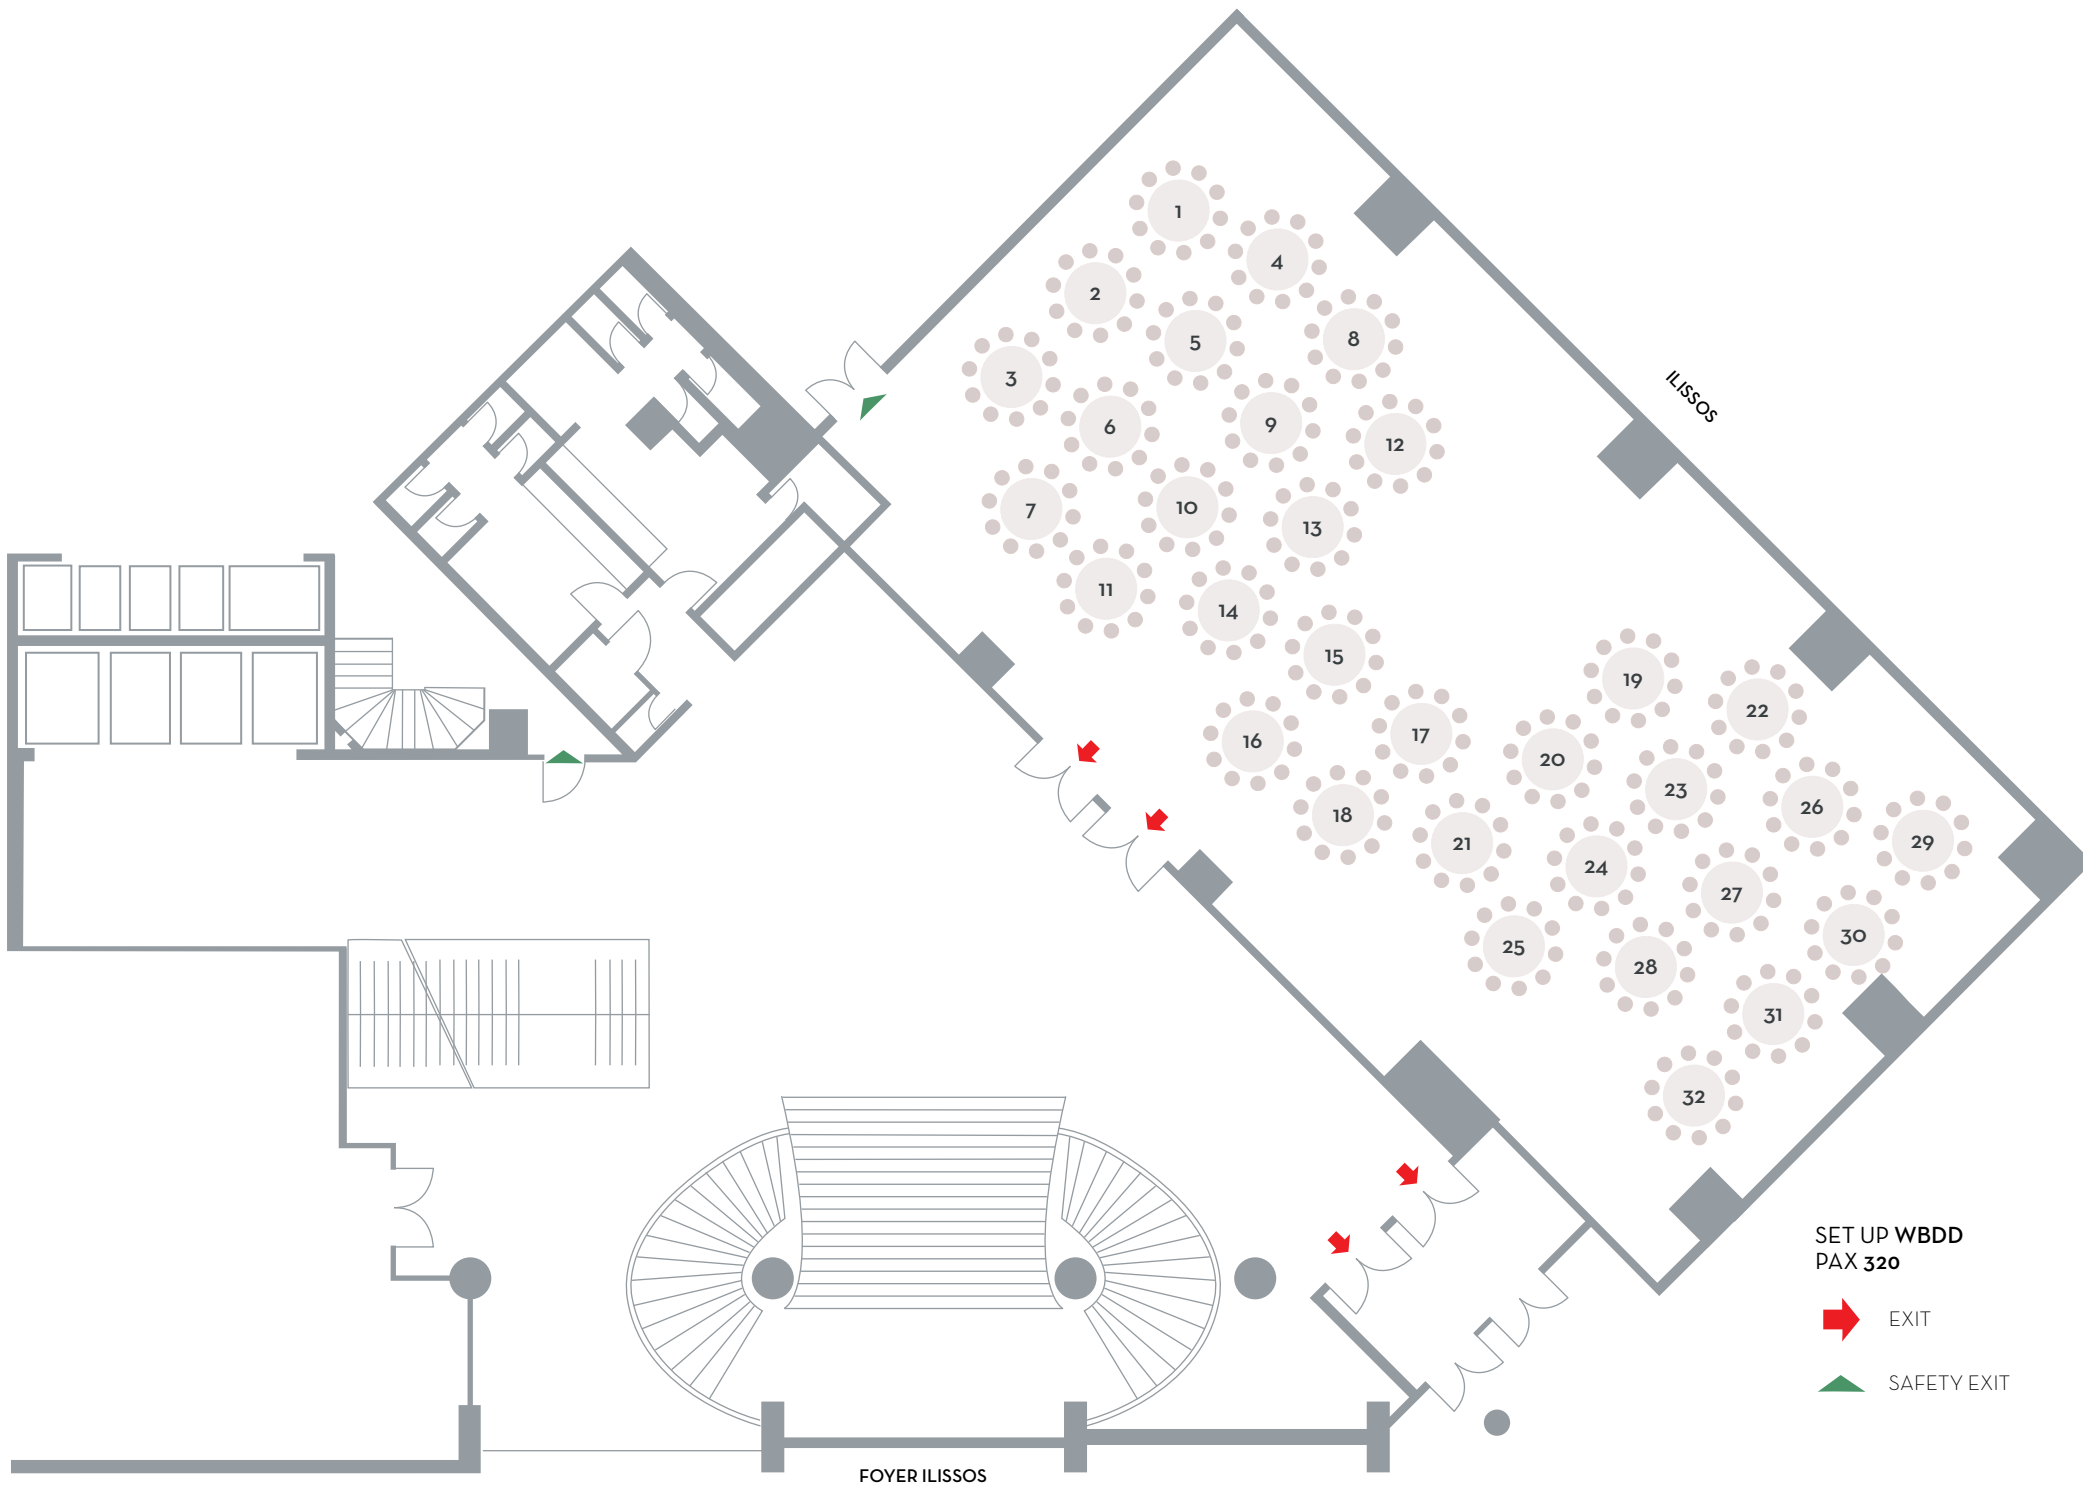

SET UP WBDD  
PAX 320




EXIT



SAFETY EXIT



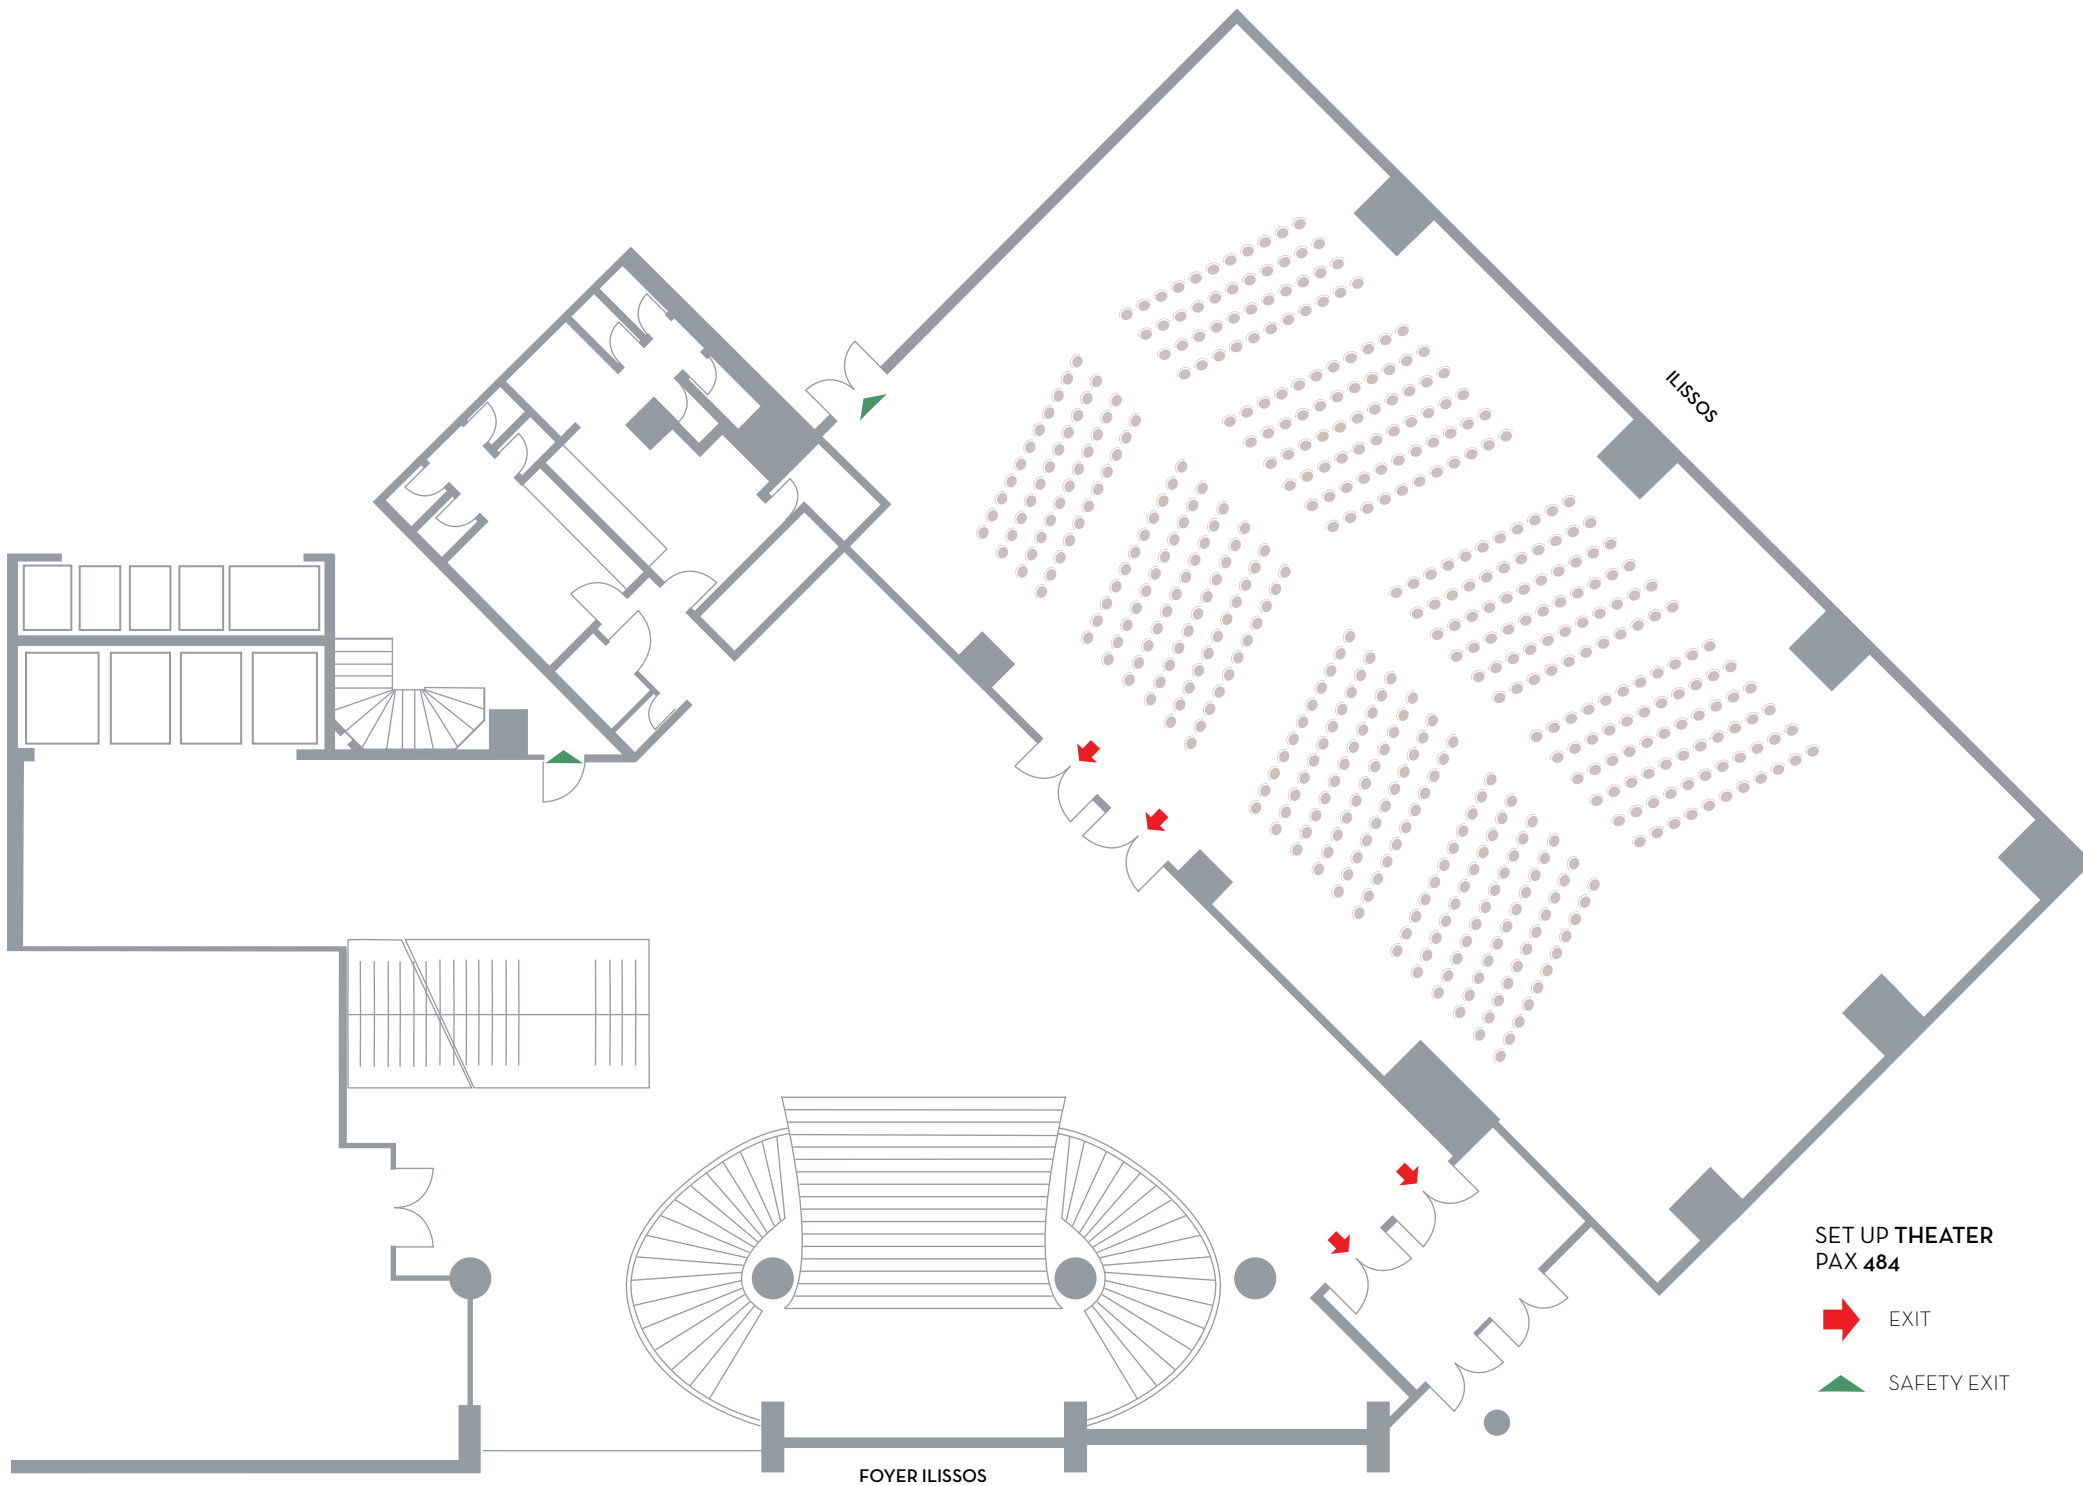


**SET UP THEATER  
PAX 484**

 EXIT

 SAFETY EXIT

FOYER ILISSOS

ILISSOS

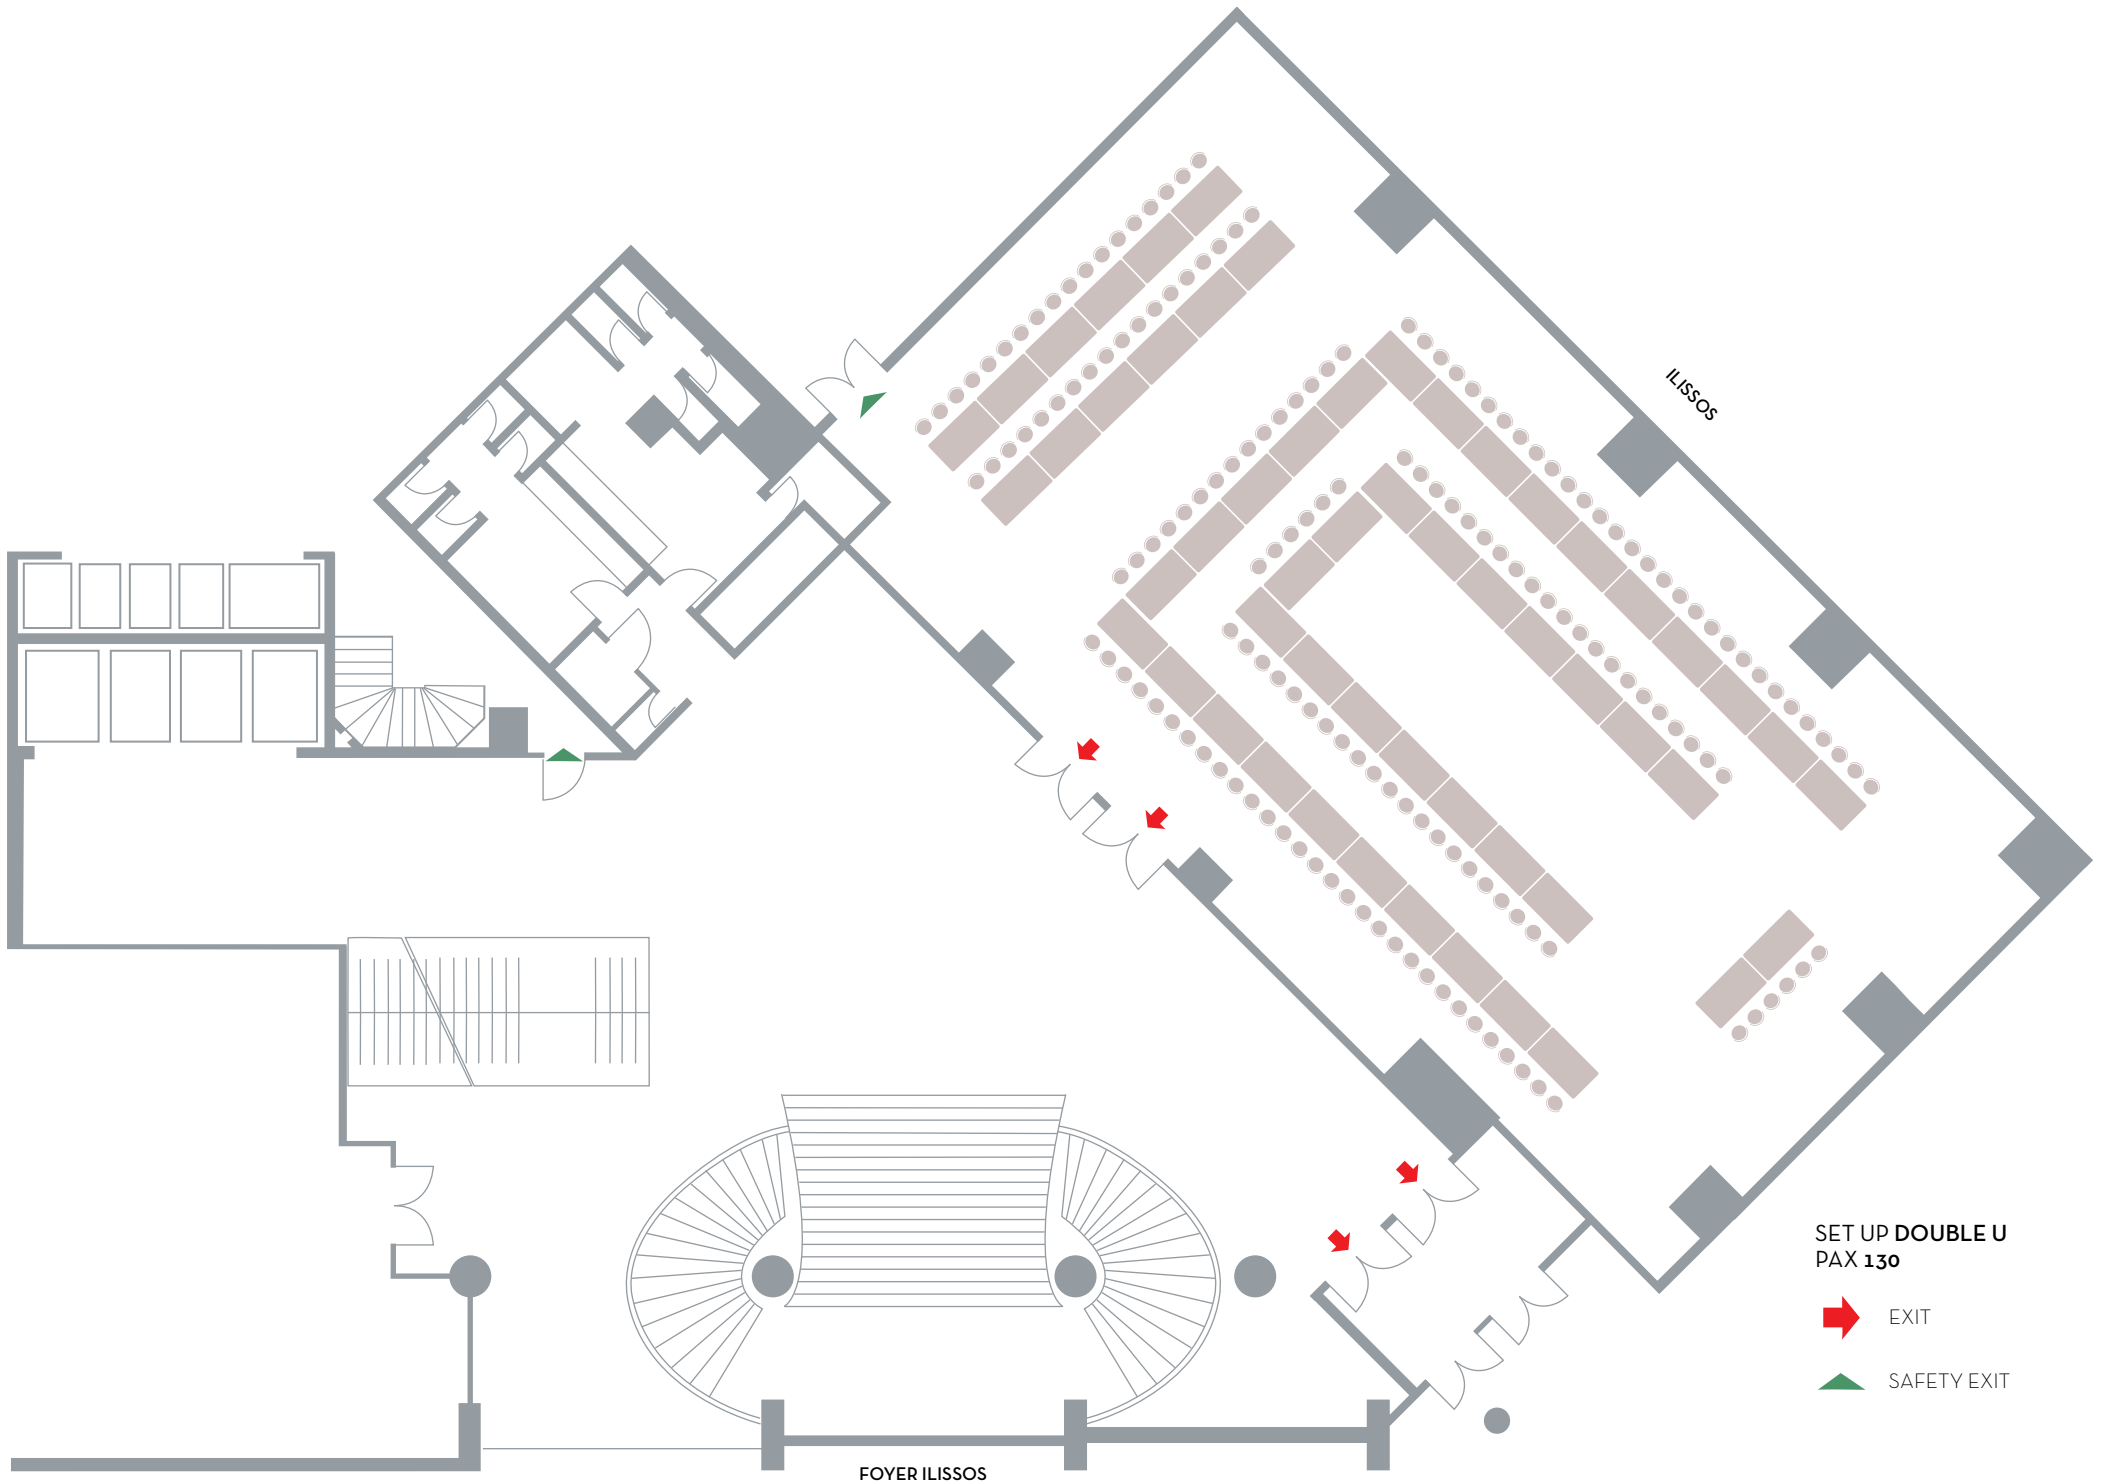

SET UP DOUBLE U  
PAX 130



EXIT



SAFETY EXIT